

Installation & Operating Instructions



LED LuxPanel

 
IP65 Standard & Dimmable Drivers - 600mm², 620mm², 600mm x 1200mm


NOTE - To comply with UK regulations, installation must be carried out by qualified electrician and in accordance with the current IEE Wiring Regulations (BS7671) and Building Regulations.


ENSURE ELECTRICAL SUPPLY IS DISCONNECTED/ISOLATED BEFORE COMMENCING INSTALLATION

 
SUGGESTED METHOD OF INSTALLATION

- Turn OFF power supply, ensure all required equipment and tools are present.
- For installations in suspended ceilings, remove the relevant ceiling tile. NOTE - LuxPanels are designed to fit exposed T-bar ceilings set either 5mm/10mm larger than the LuxPanel, see individual LuxPanels for more details.
- 3. Connect the LED driver to the mains supply. **NOTE** The driver or emergency conversion pack are remote. Mains connection to the input terminals and the output terminal is to be connected to the lead supplied with the LuxPanel (Brown to +, Blue to -).
- Connect the 2 parts of the lead from the LED driver to the LuxPanel.
- The LED driver or emergency pack can be positioned either on top of an adjacent ceiling tile or the LuxPanel. For surface and suspended installations, the driver can be positioned on top of the LuxPanel and alternative emergency options are available if required.
- With the LuxPanel connected and installed, reinstate the mains power supply and test function.



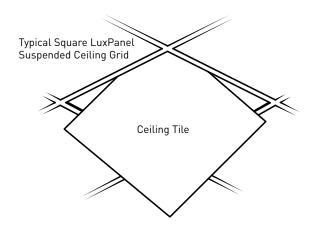

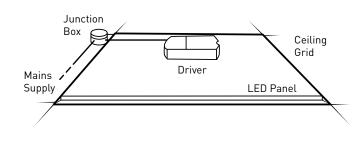















Tech Help Line

UK - **0845 194 7584** Non UK - +44 (0)1952 238 100

Supplied by **BG Electrical Ltd** Stafford Park 1 TF3 3BD ENGLAND Visit our website at

www.luceco.co