



Installation instructions

RL 737 70/I HPS Floodlight

Specifications

Floodlight: Glass reinforced polyester

Suitable lamps: 70W/I E27 MV Elliptical, internally ignited lamp

Mounting Height: 0m – 7m, Pole and wall mounting, also low mounting on the ground

Distance for 1 lux @ 5m mounting height: 14m

Specifications of Glass: 213mm x 214mm x 4mm thick toughened to SANS 1193:2008

Projected Area: 59676mm² (0.059676m²)

Dimensions of fitting: Length – 178mm, Width – 228mm, Depth – 242mm

Fitting Weight: 3.5kg

Ingress Protection: IP65

Ambient temperature range: -20°C to +40°C (floodlight only)

Not suitable for indoor use

THIS UNIT MUST BE EARTHED

VERY IMPORTANT

Electrical products can cause serious injury, death or damage to property. The luminaire must be installed in accordance with SANS 10142 by a suitably qualified electrician.

Ensure that the certificate of compliance is updated.

The lamp (bulb) can be installed before mounting the fitting

- The mains supply must be switched off
- Mount fitting to a wall or a pole using the appropriate wall plugs and screws or pole bracket.
- Slightly loosen the bracket screws and tilt the fitting up or down in order to gain access to the control gear lid on the back of the fitting. Remove the lid.
- Bring the main supply cable into the fitting through the gland and tighten the gland.
- Connect the main supply cable to the connector block. The brown or red wire is connected to the L terminal (line), the black or blue wire is connected to the N terminal (neutral) and the green or green/yellow wire is connected to the E terminal (earth). Make sure that the connections are tight.
- Replace the control gear lid.
- Aim the fitting in the desired direction and tighten the bracket screws.
- To install the lamp carefully undo the 3 screws and remove the plastic lamp assembly on the side of the floodlight. Insert the lamp half way into the floodlight before fastening the lamp into the lamp holder. Tighten it firmly.
- Replace the plastic lamp assembly and tighten the 3 screws.

Customer care line 0861 REEFLITE

WARNING

- **Ensure that all screws, glands are tight and the lamp holder is correctly locked in place.**
- **Lubricate all screws with grease.**
- **Use only one cable per gland.**
- **Ensure that the cable used is suitable for the number 0 gland supplied. Incorrect cable use will nullify warranty.**
- **Not adhering to installation instruction and warnings will nullify warranty.**
- **Any modification made to any part of the luminaire will nullify the warranty.**
- **Replace all cracked or broken protective shield**



Installation instructions

RL 737 70 MH Floodlight

Specifications

Floodlight: Glass reinforced polyester

Suitable lamps: 70W E27 MH Elliptical

Mounting Height: 0m – 7m, Pole and wall mounting, also low mounting on the ground

Distance for 1 lux @ 5m mounting height: 14m

Specifications of Glass: 213mm x 214mm x 4mm thick toughened to SANS 1193:2008

Projected Area: 59676mm² (0.059676m²)

Dimensions of fitting: Length – 178mm, Width – 228mm, Depth – 242mm

Fitting Weight: 3.5kg

Ingress Protection: IP65

Ambient temperature range: -20°C to +40°C (floodlight only)

Not suitable for indoor use

THIS UNIT MUST BE EARTHED

VERY IMPORTANT

Electrical products can cause serious injury, death or damage to property. This luminaire must be installed in accordance with SANS 10142 by a suitably qualified electrician. Ensure that the certificate of compliance is updated.

The lamp (bulb) can be installed before mounting the fitting

- The mains supply must be switched off
- Mount fitting to a wall or a pole using the appropriate wall plugs and screws or pole bracket.
- Slightly loosen the bracket screws and tilt the fitting up or down in order to gain access to the control gear lid on the back of the fitting. Remove the lid.
- Bring the main supply cable into the fitting through the gland and tighten the gland.
- Connect the main supply cable to the connector block. The brown or red wire is connected to the L terminal (line), the black or blue wire is connected to the N terminal (neutral) and the green or green/yellow wire is connected to the E terminal (earth). Make sure that the connections are tight.
- Replace the control gear lid.
- Aim the fitting in the desired direction and tighten the bracket screws.
- To install the lamp carefully undo the 3 screws and remove the plastic lamp assembly on the side of the floodlight. Insert the lamp half way into the floodlight before fastening the lamp into the lamp holder. Tighten it firmly.
- Replace the plastic lamp assembly and tighten the 3 screws.

Customer care line 0861 REEFLITE

WARNING

- **Ensure that all screws, glands are tight and the lamp holder is correctly locked in place.**
- **Lubricate all screws with grease.**
- **Use only one cable per gland.**
- **Ensure that the cable used is suitable for the number 0 gland supplied. Incorrect cable use will nullify warranty.**
- **Not adhering to installation instruction and warnings will nullify warranty.**
- **Any modification made to any part of the luminaire will nullify the warranty.**
- **Replace cracked or broken protective shield**



Installation instructions

RL 737 80 MV Floodlight

Specifications

Floodlight: Glass reinforced polyester

Suitable lamps: 80W E27 MV Elliptical

Mounting Height: 0m – 7m, Pole and wall mounting, also low mounting on the ground

Distance for 1 lux @ 5m mounting height: 12m

Specifications of Glass: 213mm x 214mm x 4mm thick toughened to SANS 1193:2008

Projected Area: 59676mm² (0.059676m²)

Dimensions of fitting: Length – 178mm, Width – 228mm, Depth – 242mm

Fitting Weight: 3.5kg

Ingress Protection: IP65

Ambient temperature range: -20°C to +40°C (floodlight only)

Not suitable for indoor use

THIS UNIT MUST BE EARTHED

VERY IMPORTANT

Electrical products can cause serious injury, death or damage to property. This luminaire must be installed in accordance with SANS 10142 by a suitably qualified electrician. Ensure that the certificate of compliance is updated.

The lamp (bulb) can be installed before mounting the fitting

- The mains supply must be switched off
- Mount fitting to a wall or a pole using the appropriate wall plugs and screws or pole bracket.
- Slightly loosen the bracket screws and tilt the fitting up or down in order to gain access to the control gear lid on the back of the fitting. Remove the lid.
- Bring the main supply cable into the fitting through the gland and tighten the gland.
- Connect the main supply cable to the connector block. The brown or red wire is connected to the L terminal (line), the black or blue wire is connected to the N terminal (neutral) and the green or green/yellow wire is connected to the E terminal (earth). Make sure that the connections are tight.
- Replace the control gear lid.
- Aim the fitting in the desired direction and tighten the bracket screws.
- To install the lamp carefully undo the 3 screws and remove the plastic lamp assembly on the side of the floodlight. Insert the lamp half way into the floodlight before fastening the lamp into the lamp holder. Tighten it firmly.
- Replace the plastic lamp assembly and tighten the 3 screws.

Customer care line 0861 REEFLITE

WARNING

- **Ensure that all screws, glands are tight and the lamp holder is correctly locked in place.**
- **Lubricate all screws with grease.**
- **Use only one cable per gland.**
- **Ensure that the cable used is suitable for the number 0 gland supplied. Incorrect cable use will nullify warranty.**
- **Not adhering to installation instruction and warnings will nullify warranty.**
- **Any modification made to any part of the luminaire will nullify the warranty.**
- **Replace all cracked or broken protective shield**



Installation instructions

RL 737 125 MV Floodlight

Specifications

Floodlight: Glass reinforced polyester

Suitable lamps: 125W E27 MV Elliptical

Mounting Height: 0m – 7m, Pole and wall mounting, also low mounting on the ground

Distance for 1 lux @ 5m mounting height: 16m

Specifications of Glass: 213mm x 214mm x 4mm thick toughened to SANS 1193:2008

Projected Area: 59676mm² (0.059676m²)

Dimensions of fitting: Length – 178mm, Width – 228mm, Depth – 242mm

Fitting Weight: 3.5kg

Ingress Protection: IP65

Ambient temperature range: -20°C to +40°C (floodlight only)

Not suitable for indoor use

THIS UNIT MUST BE EARTHED

VERY IMPORTANT

Electrical products can cause serious injury, death or damage to property. The luminaire must be installed in accordance with SANS 10142 by a suitably qualified electrician.

Ensure that the certificate of compliance is updated.

The lamp (bulb) can be installed before mounting the fitting

- The mains supply must be switched off
- Mount fitting to a wall or a pole using the appropriate wall plugs and screws or pole bracket.
- Slightly loosen the bracket screws and tilt the fitting up or down in order to gain access to the control gear lid on the back of the fitting. Remove the lid.
- Bring the main supply cable into the fitting through the gland and tighten the gland.
- Connect the main supply cable to the connector block. The brown or red wire is connected to the L terminal (line), the black or blue wire is connected the N terminal (neutral) and the green or green/yellow wire is connected to the E terminal (earth). Make sure that the connections are tight.
- Replace the control gear lid.
- Aim the fitting in the desired direction and tighten the bracket screws.
- To install the lamp carefully undo the 3 screws and remove the plastic lamp assembly on the side of the floodlight. Insert the lamp half way into the floodlight before fastening the lamp into the lamp holder. Tighten it firmly.
- Replace the plastic lamp assembly and tighten the 3 screws.

Customer care line 0861 REEFLITE

WARNING

- Ensure that all screws, glands are tight and the lamp holder is correctly locked in place.
- Lubricate all screws with grease.
- Use only one cable per gland.
- Ensure that the cable used is suitable for the number 0 gland supplied. Incorrect cable use will nullify warranty.
- Not adhering to installation instruction and warnings will nullify warrantee.
- Any modification made to any part of the luminaire will nullify the warrantee.
- Replace all cracked or broken protective shield